

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**

## **INSTALLATION INSTRUCTIONS**

1. Remove old module and clean surface on which it was mounted.
2. Apply the capsule of the special silicone grease to the metal surface of the new module. This “grease” will aid in dissipation of heat from module.
3. Install module with original screws and lockwashers. Tighten securely, but DO NOT OVERTIGHTEN.
4. Reattach connector and pick-up leads to module.

**693302**