




**Installation Instructions for
B&M Universal GM
Adjustable Detent Cable
PNs 30287 and 70242**

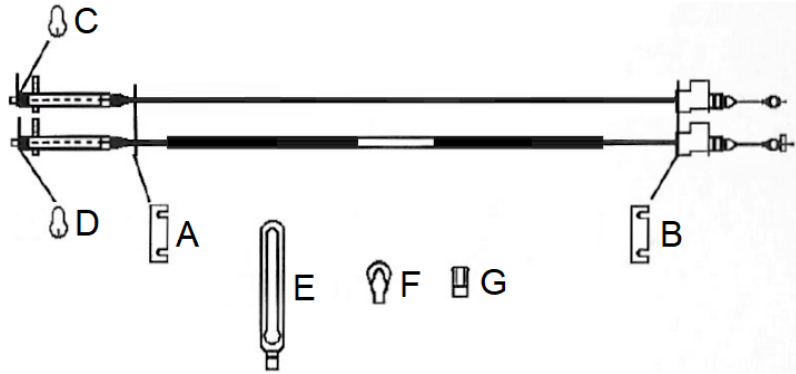

1. Remove the original cable from the vehicle.
2. Remove B&M's adjustable detent cable from the package, notice the tool board enclosed. Parts A & B are identical and are used to hold the original cable and the new cable parallel for accurate measurement. Parts C & D (also identical to each other) are used to keep the inner cables in position.
3. Clip A & B in place, align both ends of the outer cable, as shown above. Use 2 open end 1/2" wrenches to tighten fittings on top and bottom.
4. Next clip on C & D, one on the original cable and the other on the new adjustable cable. These tools are used to keep the inner cable end from pulling up into the lower cable housing. With both

inner cables pulled tight, install the appropriate cable end, E or F, depending upon which was on your original cable. Now slip the brass cable end retainer G on to the inner cable so both the original inner cable end and the adjustable cable end are in the same position. Tighten the small screw with a screwdriver. Cut the inner cable approximately 2" longer than necessary. This is done to make sure you will have sufficient inner cable, if any further adjustment is necessary.

5. Install the cable on the vehicle and make the necessary adjustments with the upper outer cable push button adjuster.
6. When you are sure your installation is complete, cut off the extra inner cable.