



RADIATOR CAP COVER INSTALLATION INSTRUCTIONS

After your new Frostbite radiator is installed in your vehicle, install the base unit of your new Frostbite Billet cap until it is completely snug on the radiator - **see Photo 1**. Next, place the billet portion of your cap loosely over the installed base unit and orient the engraved Frostbite logo in the position you desire for it to be viewed, i.e., facing the front of the vehicle or to the side - **see Photo 2 / Photo 3**.

Lastly, place a clean shop towel over the billet cap and lightly press the billet unit over the base unit. If needed, use a rubber mallet, lightly striking the cap until it is firmly seated onto the base unit - **see Photo 4**. You will need to tap the cap into the final position by working the mallet around the entire circumference of the billet unit until completely mated to the base unit.

Please note that once the final step is completed, you will not be able to change the orientation of the Frostbite logo, so take your time lining the top unit up where you desire before striking with the rubber mallet. Enjoy your new cap and show it proudly at your next car show. Thank you!



PHOTO 1



PHOTO 2

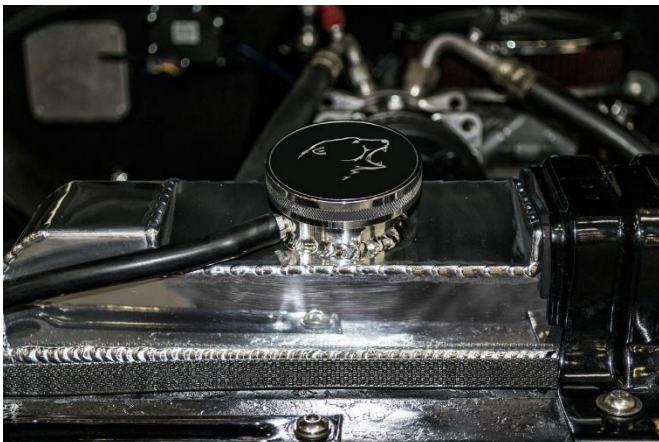


PHOTO 3



PHOTO 4

199R11914
Date: 5-17-19